




Cortona116 Links




Cortona116 Rechts

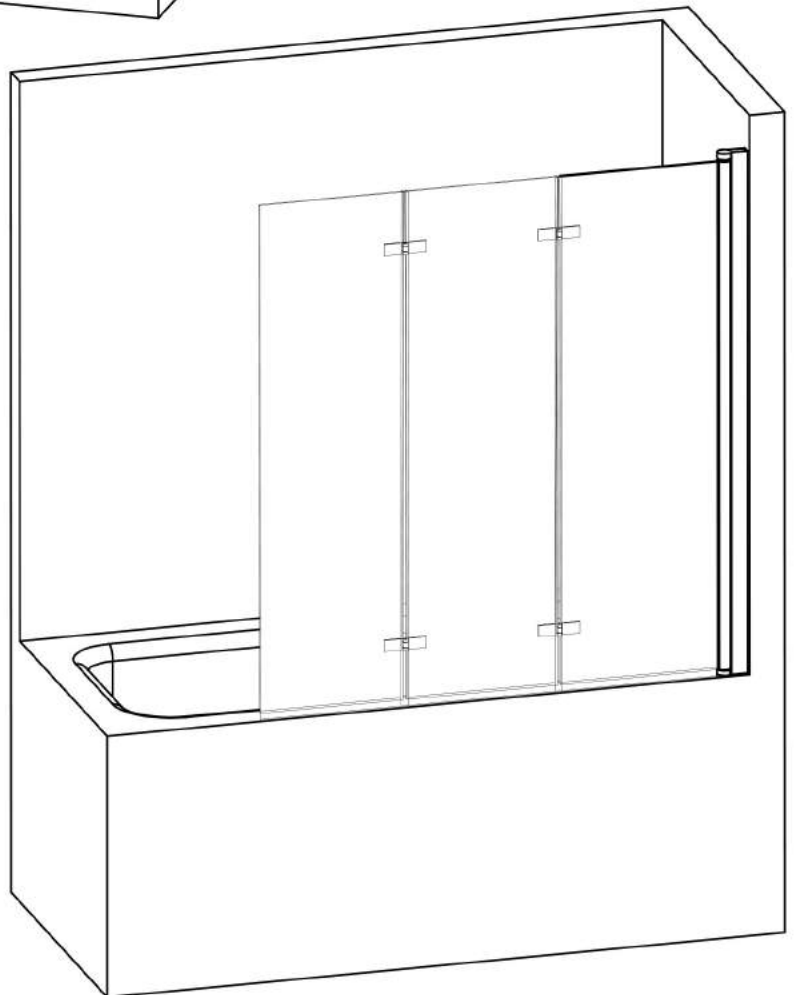

# Montageanleitung

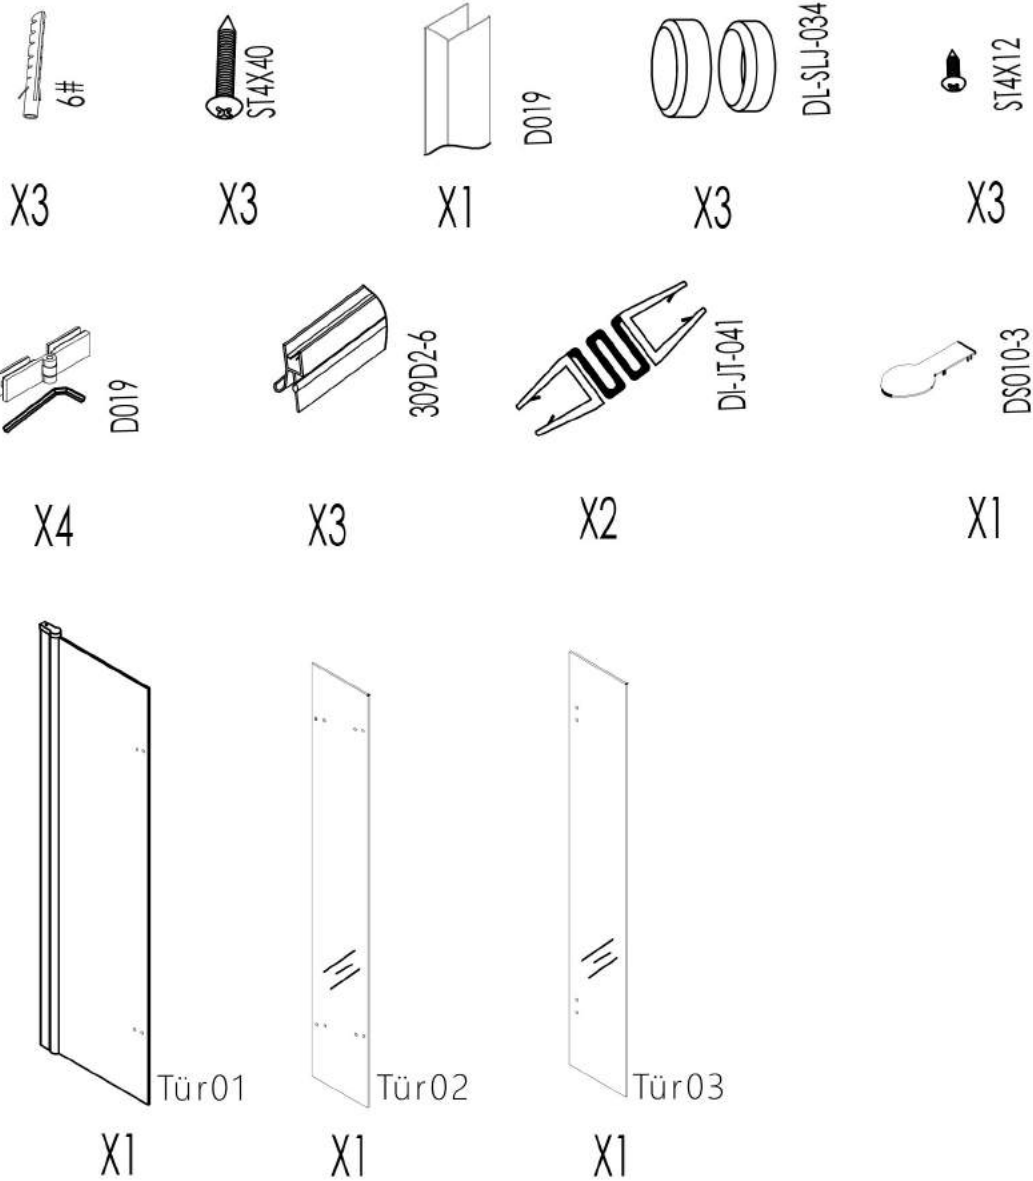

## Benötigtes Werkzeug

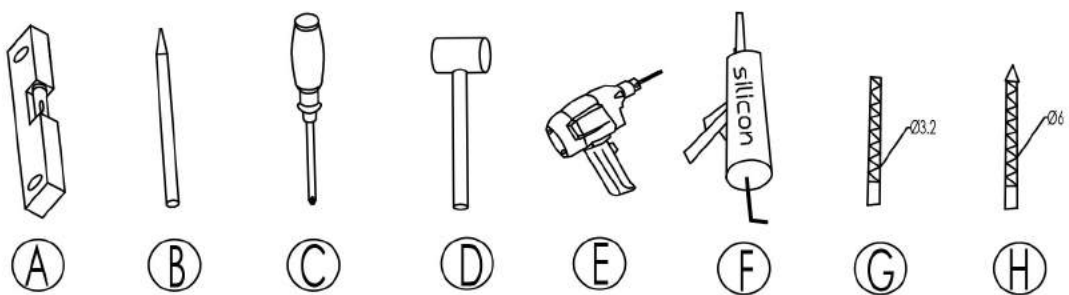

1



D019

X1




6#

X3



X3

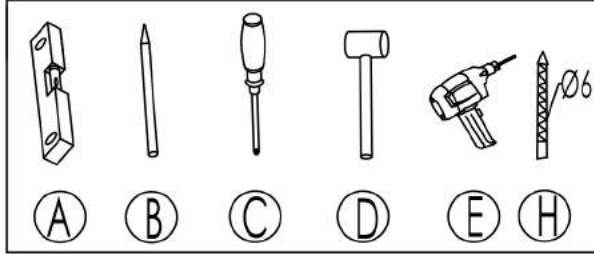

(A)





(B)

(C)

(D)


(E)

(H)

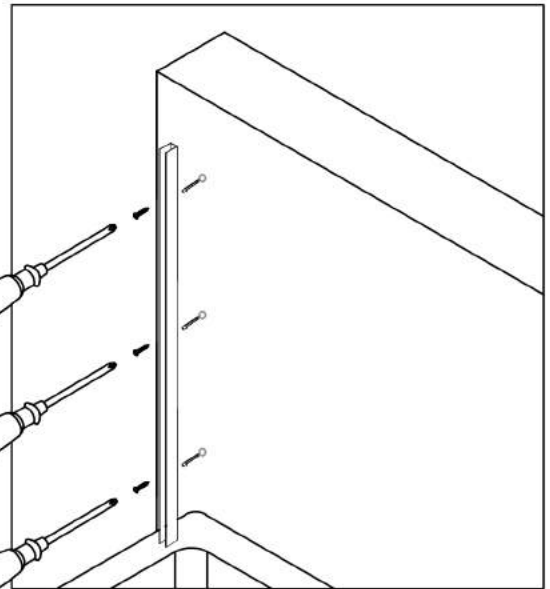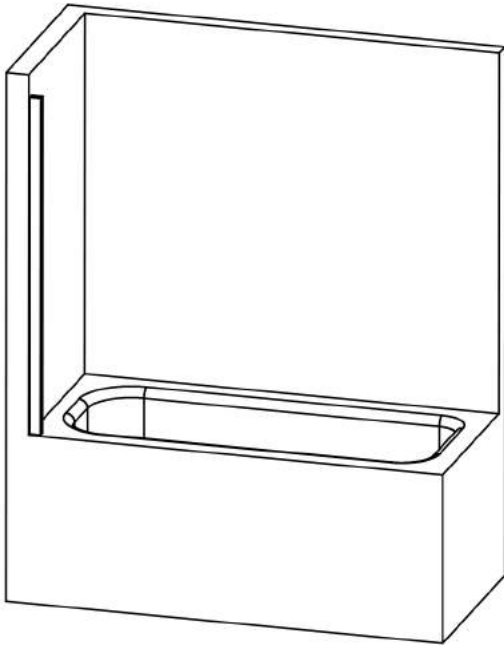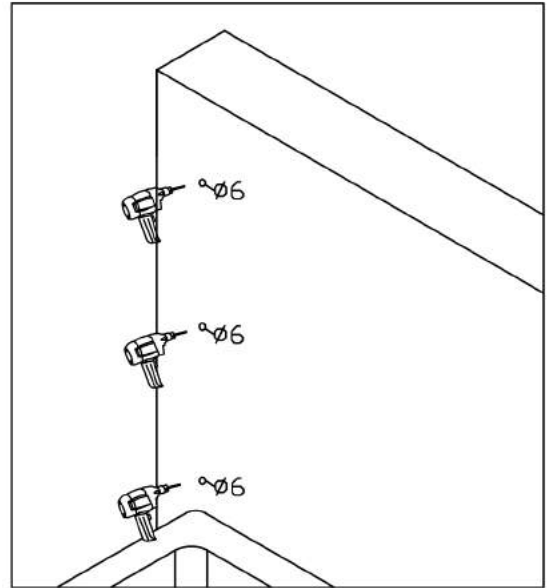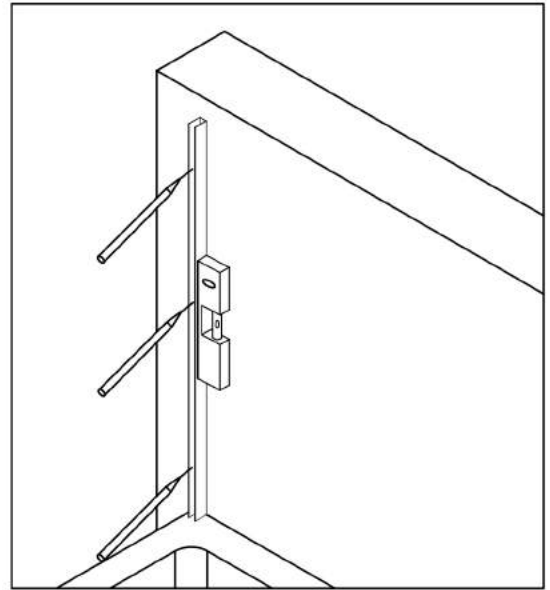

(2)

2





DI-SLJ-034

X3







ST4X12

X3

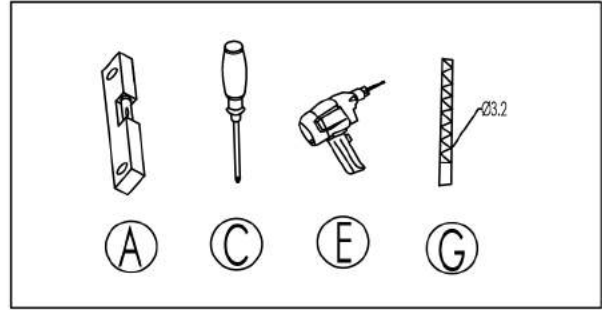

Tür01

X1

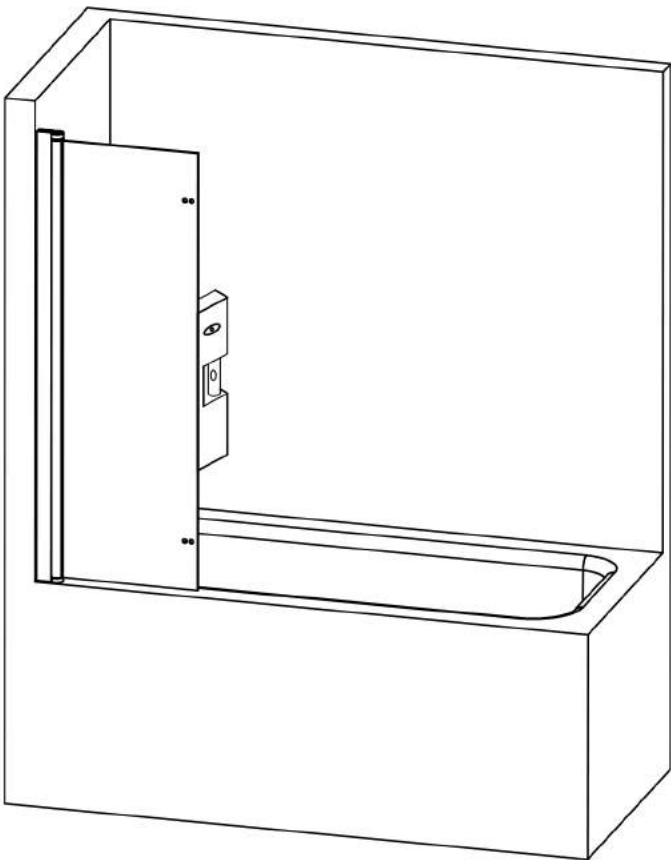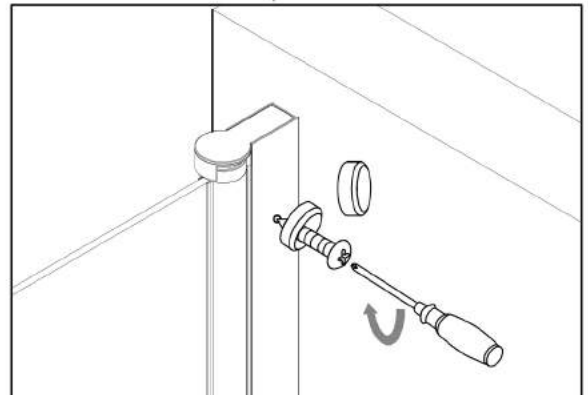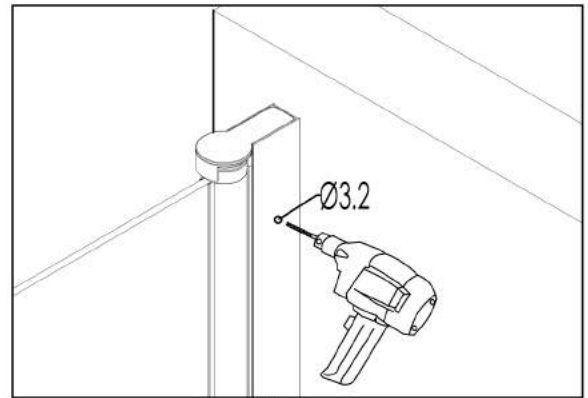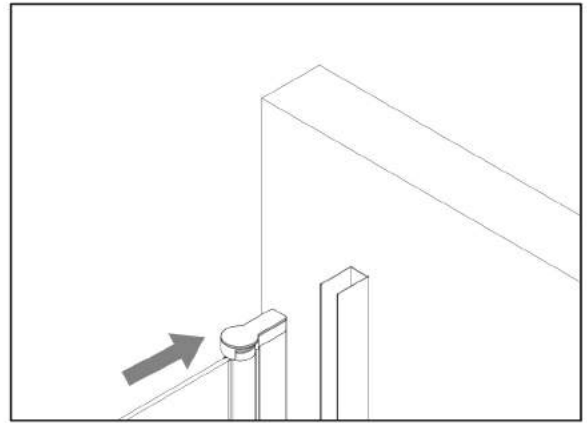


3


3







X4

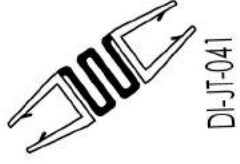

X2

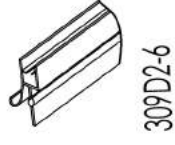

X3

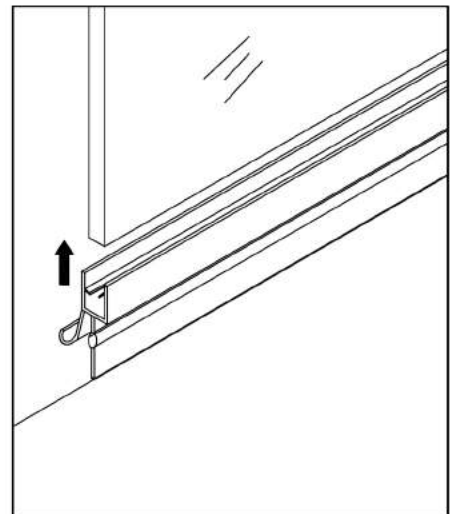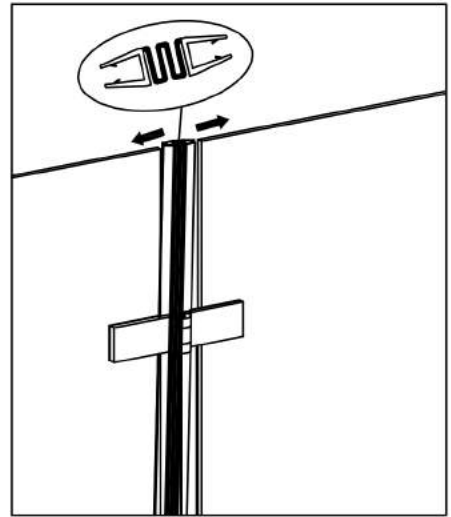
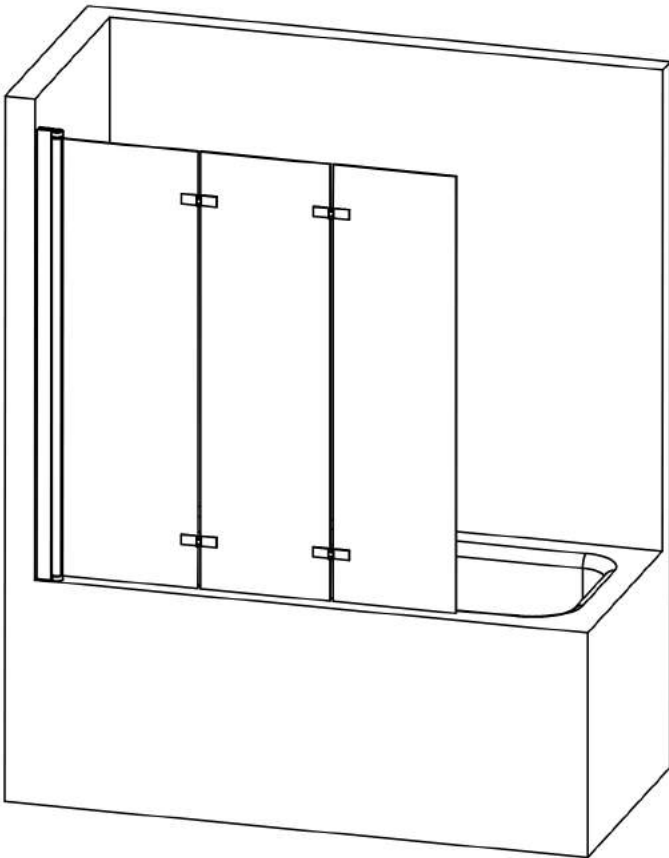
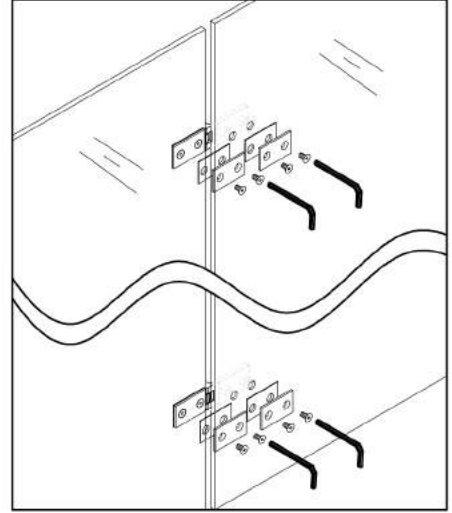


4

4

DS010-3

X1

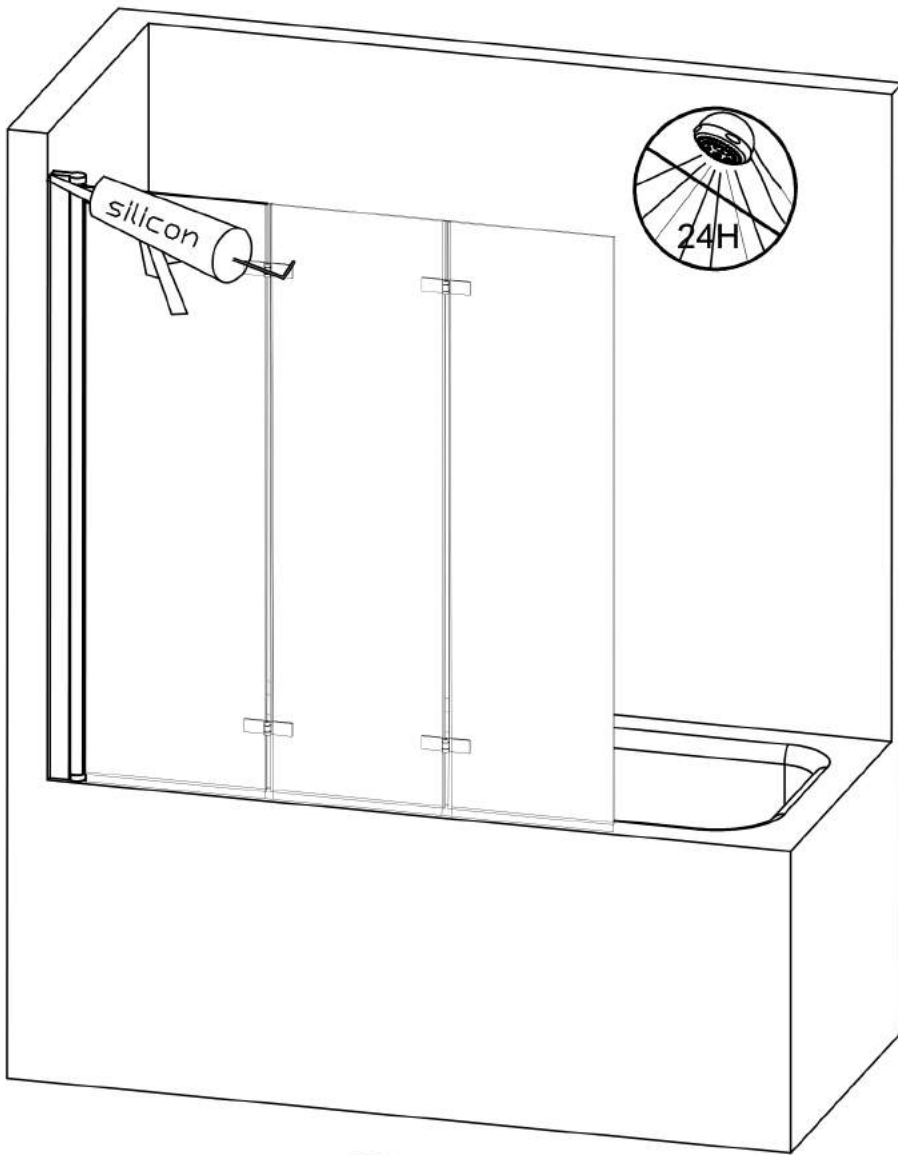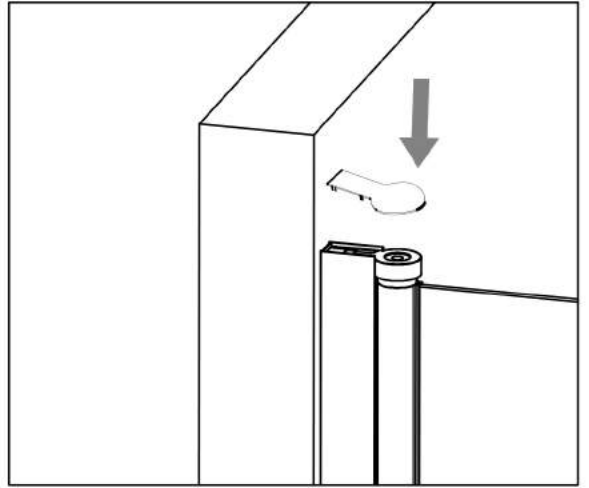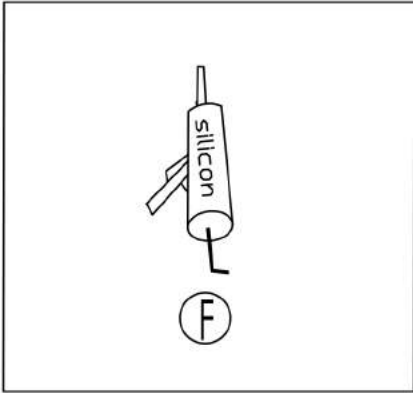

5